

SWEDOOR

JELD-WEN
DOOR SOLUTIONS

ADVANCE - LINE

CONDESIGN INFOCOM 2010-09 Artikehr: 28466

SE MONTERINGSANVISNING
KARM I LÖSA DELAR

DK MONTERINGSVEJLEDNING
USAMLEDE KARME


NO MONTERINGSANVISNING
KARM I LØSE DELER

FI ASENNUSOHJEET
KARMI OSINA

UK INSTALLATION INSTRUCTIONS
UNASSEMBLED FRAME




Skötselråd: www.swedoor.se
Vedligeholdelsesvejledning: www.swedoor.dk
Vedlikeholdsråd: www.swedoor.no
Care advice: www.swedoor.uk
Hoito-ohjeet: www.jeld-wen.fi

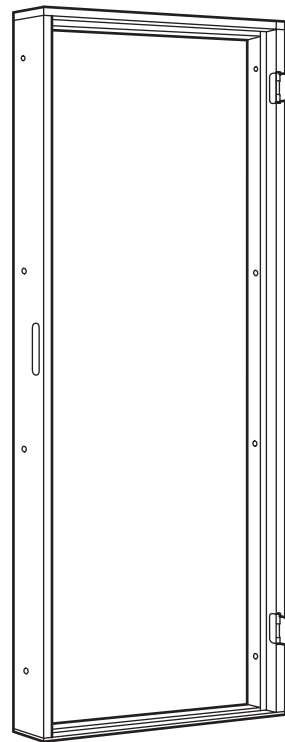


RELIABILITY *for real life*®

SWEDOOR
JELD-WEN
DOOR SOLUTIONS

VERKTYG SOM DU BEHÖVER
VÆRKTØJ, DU SKAL BRUGE
VERKTØY SOM DU TRENGER
TARVITAVAT TYÖKALUT
TOOLS REQUIRED

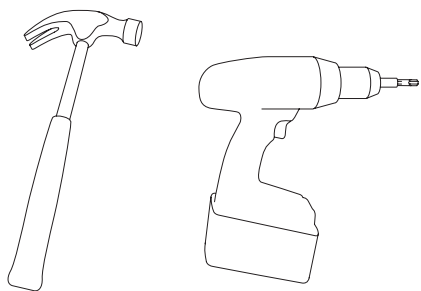


DETTA INGÅR
DETTE MEDFØLGER
DETTE FØLGER MED
NÄMÄ SISÄLTYVÄT
INCLUDED

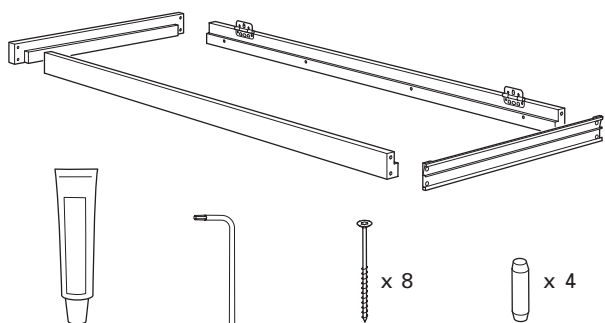


x 2(3)


x 4(6)

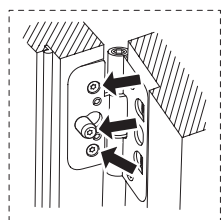

1

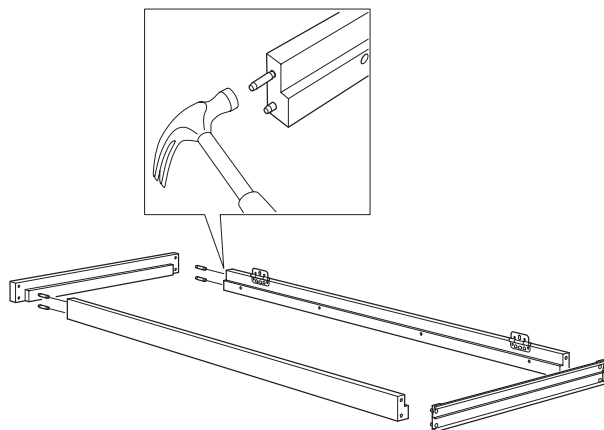

2

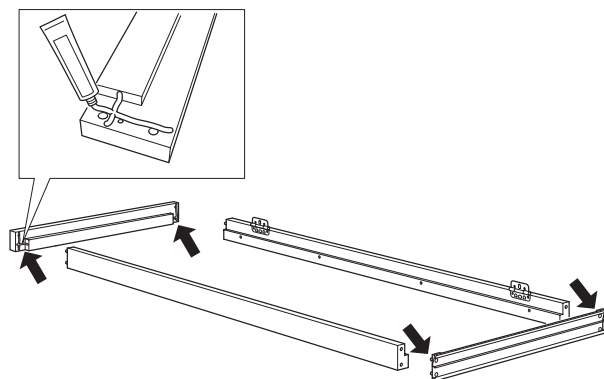

3

